



Instruction Manual

Advanced Wire Tracer

Model AT-1000

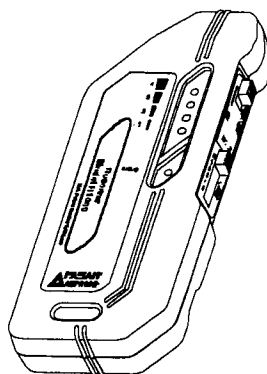

R1000

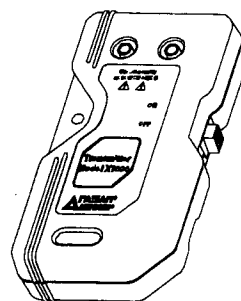

X1000



Limited Warranty

Congratulations! You are now the owner of an AMPROBE PASAR Instrument. It has been crafted according to quality standards and contains quality components and workmanship. This instrument has been inspected for proper operation of all of its functions. It has been tested by qualified factory technicians according to the long established standards of AMPROBE INSTRUMENT.

Your AMPROBE PASAR instrument has a limited warranty against defective materials, and/or workmanship for two years from the date of purchase provided that, in the opinion of the factory, the instrument has not been tampered with or taken apart.

Above limited warranty covers repair and replacement of the instrument only and no other obligation is stated or implied. AMPROBE PASAR and its representatives shall not be liable for any loss or damage arising out of the use or misuse of this product. User is responsible for using this product with regards to safety.

Should your instrument fail due to defective materials and/or workmanship during the two year warranty period, return it along with a copy of your dated bill of sale which must identify instrument by model number and serial number.

For your protection, please use the instrument as soon as possible. If damaged, or should the need arise to return your instrument, it must be securely wrapped (to prevent damage in transit) and sent prepaid via Air Parcel Post insured or U.P.S. where available to:

Service Division
AMPROBE INSTRUMENT
630 Merrick Road (For U.P.S.)
P.O. Box 329 (For A.P.P.)
Lynbrook, NY 11563-0329

Outside the U.S.A. the local Amprobe representative will assist you. Above limited warranty covers repair and replacement of instrument only and no other obligation is stated or implied.

Table Of Contents

Introduction.....	4
Safety Precautions and Warnings.....	5
Component Description	
R1000 Receiver.....	6
X1000 Transmitter.....	7
Replacing Batteries: R1000 and X1000.....	8
Locating Circuit Breakers or Fuses.....	8
C2901 Pigtail Cord Set.....	9
C2902 Alligator Banana Cord Set.....	9
Tracing Energized Wires.....	10
AD-1 Adapter.....	11
Locating Opens.....	13
Locating Shorts.....	14
Specifications.....	15

 
Introduction

AMPROBE PASAR is dedicated to designing, manufacturing and marketing high quality, reliable instruments for the skilled professional. AMPROBE PASAR has a history of providing safe, reliable equipment to trace energized wires, circuit breakers, tracing deenergized wires, and locating opens. The AT-1000, Advanced Tracing System, combines these features in one versatile tool and is effective in solving most residential (no-industrial) tracing problems.

The AT Series is a troubleshooting tool. An experienced troubleshooter will understand how the system to be traced works under normal conditions, and be familiar with the types of malfunctions that can exist. A thorough understanding of "Ohms Law" is helpful. It is a good idea to test the circuit for parameters such as Volts, Ohms, and Current to determine whether the circuit is "shorted", "semi-shortened", or "open", before attempting to trace. The characteristics of these malfunctions will designate which components, and tracing method, will be most effective in locating these malfunctions.

A thorough understanding of the operation and function of each of the AT-1000 components is essential. Overall, this knowledge could mean the difference between spending several minutes or several hours on a job. Pay special attention to the "Safety Precautions and Warnings". Experiment under known conditions. You will gain the confidence to use it on a daily basis and solve problems which were previously unsolvable.

Safety Precautions and Warnings



1. Read this manual in its entirety before proceeding with any testing.
2. This equipment should only be used by trained professionals who are familiar with electrical hazards.
3. Wear lineman gloves, safety glasses, and protective clothing at all times.
4. Do not attempt to replace or remove the battery in the X1000 Transmitter until X1000 is removed from the circuit and the cord set test leads are removed from the X1000 transmitter.
5. Always inspect the components and accessories for damage and proper operation BEFORE using. Replace any damaged components.
6. Before connecting the X1000 Transmitter to a circuit, verify that the voltage, at the intended point of contact, does not exceed 300VAC/DC.
7. Store the components in the case when not in use.
8. Remove the battery from the R1000 Receiver and X1000 Transmitter if the components will not be in use for a long period of time.

COMPONENT DESCRIPTION

R1000 Receiver

The R1000 (see Fig.1) contains two built-in detectors that are tuned to pick-up the 17kHz signal generated by the X1000. The detector is selected by the MODE Switch. The "OPEN" position selects the electrostatic (voltage potential) detector. The "CURRENT" position selects the electromagnetic (current) detector. The selection of detector depends on the condition of the circuit to be traced. The electromagnetic detector is set in one direction within the R1000 housing. The manner in which the receiver is held, and the direction in which the detector is pointed, will vary the amount of signal that is displayed and give the user an indication of the direction of the wire being traced. This is particularly evident when the R1000 is in the "CURRENT" MODE. Pointing the receiver perpendicular to the wire, so that the front label faces the direction of the wire, will yield the maximum signal displayed.

The R1000 is designed to display the signal strength visually with a series of four LED's, and audibly by emitting a pulsed tone. The R1000 is turned "ON" and "OFF", as well as varying the amount of signal strength that is displayed, by the Sensitivity Range Switch (OFF, X1, X2, X3, X4, X5). The Battery LED illuminates when the R1000 is turned ON. The distance the R1000 is held from the wire carrying the signal will also vary the signal strength that is displayed. The receiver can typically detect a signal approximately 1-3 feet away from the wire carrying the signal. Always try to keep the sensitivity low enough, or high enough, to maintain a maximum of 3 LED's on the indicator so the wire that is carrying the maximum signal is easily identified.

The user must vary the sensitivity to what is considered an acceptable, usable level (usually 3 LED's), while holding the receiver in the proper direction, to locate the conductor that is carrying the signal and to identify its direction.

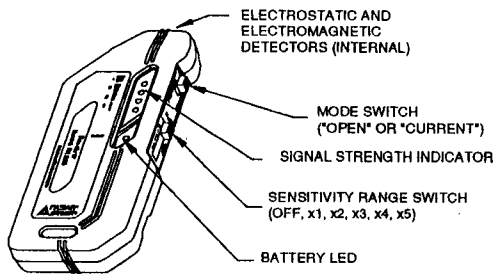


FIG. 1: R1000 RECEIVER

6

X1000 Transmitter



WARNING! X1000 - Do not connect to live circuits above 300VAC/ DC !

The X1000 Transmitter (see Fig.2) enables tracing of energized circuits up to 300VAC/DC as well as tracing deenergized lines.

When connected to a closed or energized circuit that allows current to flow, the X1000 will turn on and off and cause a 17kHz **current** fluctuation that can be detected, by the R1000 in the "CURRENT" mode, along the circuit path. The signal will flow to the lowest impedance in the circuit. Usually, the signal is more evident and detected on the conductors going back to the source (transformer). To increase the signal current traveling to the source (transformer), disconnect any known loads on that circuit.

When connected to an open circuit, the X1000 will inject a 17kHz **voltage** fluctuation that can be detected, by the R1000 in the "OPEN" mode, along the circuit path to the end of that circuit. Proper operation of the X1000 Transmitter is confirmed when the R1000 receiver indicates a pulsed signal.


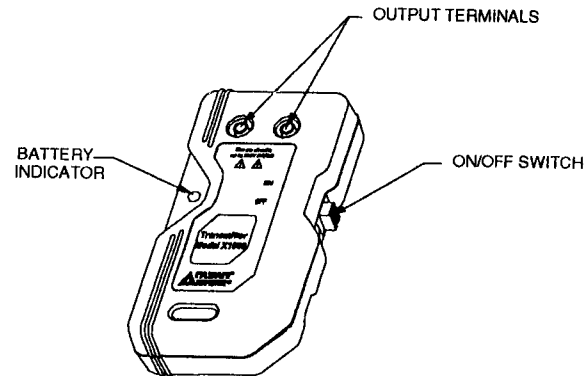



FIG. 2: X1000 TRANSMITTER

7

 Replacing Batteries: R1000 and X1000



WARNING: Do not attempt to replace or remove the battery in the X1000 Transmitter until X1000 is removed from the circuit and the cord set test leads are removed from the X1000 Transmitter.

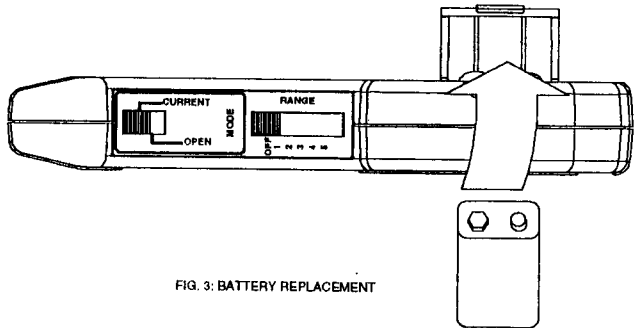

The patented battery compartment, on the back of the R1000 and X1000, allows you to replace the battery quickly and easily. Two holes on the bottom of the compartment accept the round terminals of a 9 volt battery. The compartment is designed to accept the battery in only one orientation, so if the door doesn't close, turn the battery 180° and try again.

Locating Circuit Breakers or Fuses

CAUTION: Make sure the line voltage DOES NOT EXCEED the range of the X1000: 300VAC/DC max.

- Using either the C2901 Pigtail Cord Set for 120V receptacles (see Fig. 4), or the C2902 Alligator-Clip Banana Plug Cord Set (see Fig. 5), connect the X1000 Transmitter to the circuit (see Fig. 6). When using the C2902, always connect to ground first and disconnect from ground last.

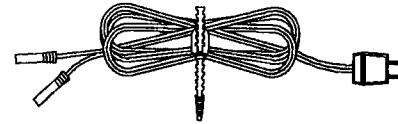


FIG. 2: C2901 CORDSET

 


FIG. 5: C2902 CORDSET

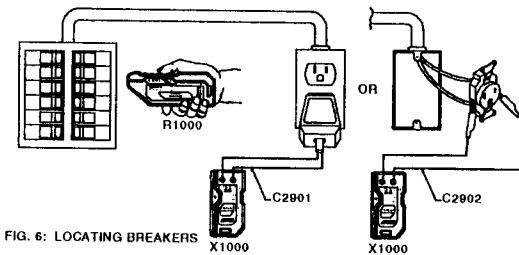


FIG. 6: LOCATING BREAKERS


- Switch the R1000 Receiver "ON" by sliding the "Sensitivity Range Switch" to position 3 and set the R1000 Mode Switch to "CURRENT" MODE.
- Verify that the X1000 Transmitter is generating a current signal by placing the R1000 tip against one of the cord set leads.
- Go to the panel and move the Receiver up and down, and in front of, each circuit breaker to determine which one has the strongest signal. Remember to keep the receiver perpendicular to the breakers. Reduce the R1000 sensitivity with the "Sensitivity Range Switch" if the signal strength goes above 4 LED's. Leave it in this position until you come across another breaker with a stronger signal. The strongest signal will determine the proper breaker.

- If two or more breakers produce the same signal strength indication, remove the panel cover and test each wire, reducing the sensitivity where necessary.


Tracing Energized Wires

CAUTION: Make sure the line voltage does not exceed the range of the X1000 Transmitter: 300VAC/DC max.

The X1000 Transmitter produces opposing signals on each output terminal. When the conductors that are connected to these terminal come within close proximity of each other, the signal strength is attenuated (see Fig. 7).

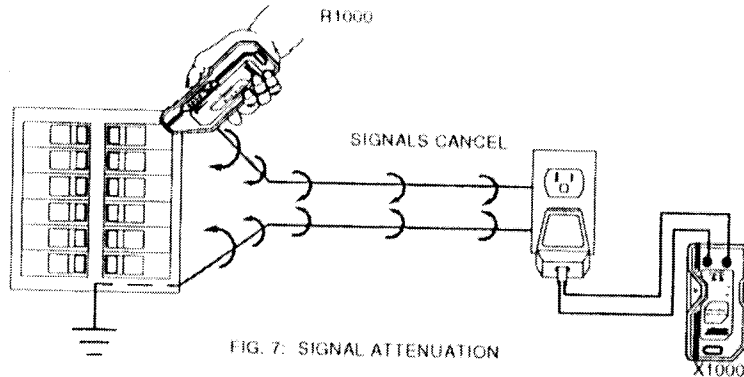

This can make tracing conductors more difficult, if not impossible. In most cases you can solve this problem by using the C2902 cord set and connecting one output terminal to a different signal return path. Use something other than the return (neutral) running adjacent to the conductor you are trying to trace, like a water pipe or a ground rod. The AD-1 adapter enables access to the hot conductor in 120VAC receptacles (see Fig. 8).

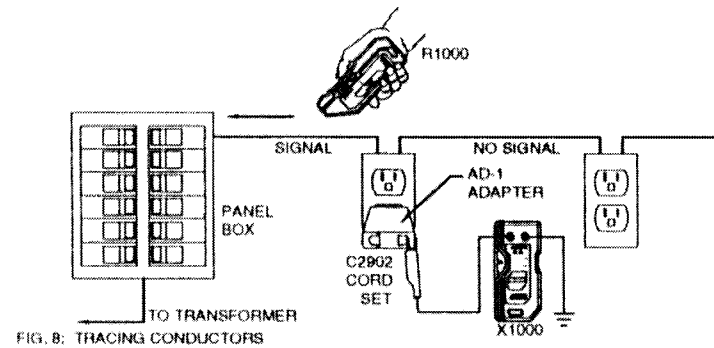

- Connect the X1000 Transmitter as in Fig.9 and turn the unit "ON".
- Set the R1000 Mode Switch to the "CURRENT" MODE.
- Switch the R1000 Receiver "ON" by sliding the "Sensitivity Range Switch" and set to position 5.
- Verify that the X1000 Transmitters generating a current signal by placing the R1000 tip against one of the cord set leads.
- Move the R1000 Receiver along the conductor path, perpendicular to the conductor, and adjust the "Sensitivity Range" as needed to maintain approximately 3-4 LED's of signal strength.

- Proceed to trace the wire by moving the R1000 left to right over the path of the wire so that you can see the rise and fall of the signal level (see Fig.9). The strongest signal confirms the path of the wire. If the signal drops off, the wire may have taken a turn in another direction. Before attempting to adjust the sensitivity, back track and try tracing from another angle, if possible. If signal becomes too strong, adjust the sensitivity as necessary.

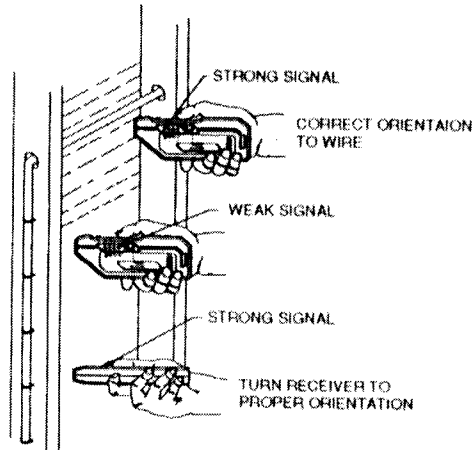


FIG. 9. TRACING WIRES

In the "Current Mode", orient the Receiver so that it is perpendicular to the wire.

Example:

Horizontal wire - The Sensitivity Range switch should face up.

Vertical wire - The Sensitivity Range switch should face either left or right.

Locating Opens

"Opens" are deenergized conductors that are not connected to a source or a load, and therefore do not pass current. First verify that the conductor is deenergized, using a voltmeter, then verify that it is open, with respect to ground and/or adjacent conductors, using an Ohmmeter.

- Using the C2902 Cord Set, connect the X1000 Transmitter to the open conductor and a separate ground as shown in Fig 10. Use the AD-1 if applicable.

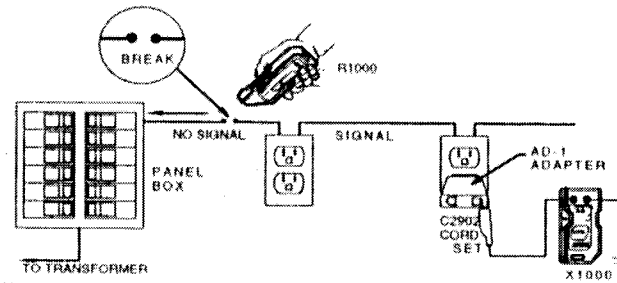


FIG. 10. TRACING

- Where possible, ground any other conductors sharing the same path as the open wire to reduce capacitive coupling, or "signal bleed-off" onto those conductors.
- Switch the R1000 Receiver to the "OPEN" mode and turn the receiver "ON" by sliding the "Sensitivity Range Switch" and set it to position 5.
- Verify that the X1000 Transmitter is generating a signal by placing the R1000 tip against one of the cord set leads.
- Proceed to trace the wire by moving the R1000 left to right over the path of the wire so that you can see the rise and fall of the signal level (see Fig. 9). Adjust the "Sensitivity Range Switch" to display 3 LEDs of signal strength. The strongest signal confirms the path of the wire. If the signal drops off, the wire may have taken a turn in another direction, or may be open at this point. Before attempting to adjust the sensitivity, back track and try tracing from another angle, if possible. Pinpoint the location of the open (where the signal drops off) by reducing the sensitivity while decreasing the distance between the R1000 and the conductor.

- If possible, repeat the process starting from the other end of the wire to verify the location of the open.

Locating Shorts

- Using the C2902 Cord Set, connect the X1000 Transmitter to the shorted conductor and a separate ground as shown in Fig 11. Use the AD-1 adapter if tracing a conductor connected to a receptacle.

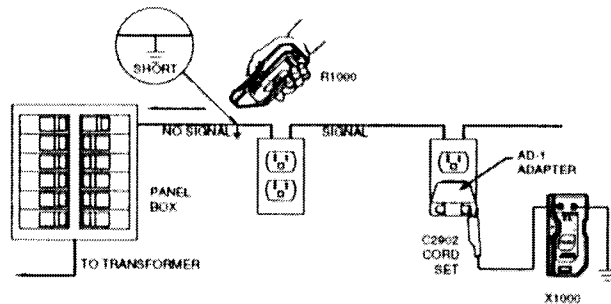


FIG 11 LOCATING SHORTS

- Switch the R1000 Receiver to the "CURRENT" mode and turn the receiver "ON" by sliding the "Sensitivity Range Switch" and set it to position 5.
- Verify that the X1000 Transmitter is generating a signal by placing the R1000 tip against one of the cord set leads.
- Proceed to trace the wire by moving the R1000 left to right over the path of the wire so that you can see the rise and fall of the signal level (see Fig. 9). Adjust the "Sensitivity Range Switch" to display 3 LEDs of signal strength. The strongest signal confirms the path of the wire. If the signal drops off, the wire may have taken a turn in another direction, or may be shorted at this point. Before attempting to adjust the sensitivity, back track and try tracing from another angle, if possible. Pinpoint the location of the short (where the signal drops off) by reducing the sensitivity while decreasing the distance between the R1000 and the conductor.
- If possible, repeat the process starting from the other end of the wire to verify the location of the short.

Specifications

General

Operating Frequency: 17kHz
Operating Temperature: 0°F to 120°F (-18°C to 49°C)
Storage Temperature: -40°F to 150°F (-40°C to 66°C)
Carrying Case Model: SV-1000 Soft Vinyl Carrying Case
 C2901 & C2902 Cord Sets
 AD-1 Adapter
 Instruction Manual

R1000

Detectors: Electromagnetic coil pickup for current mode
 Electrostatic plate for open mode
Power: 9V Battery, IEC #6LR61, Amprobe Model MN1604
Current Consumption: 14mA with no LED's on
 33 mA with LED's on
Low Battery Indicator: 6.0V
Case Material: Fire Retardant ABS 911

X1000

Input Power: 9V Battery, IEC #6LR61, Amprobe Model MN1604
Input Current: 8mA with new 9V Battery
Output Current: 15mA R.M.S. into a short circuit
Case Material: Fire Retardant ABS 911
Operating Voltage Range: 0V to 300V AC or DC