


MF2400C Series

Microwave Frequency Counter 10 Hz to 20, 27, 40 GHz



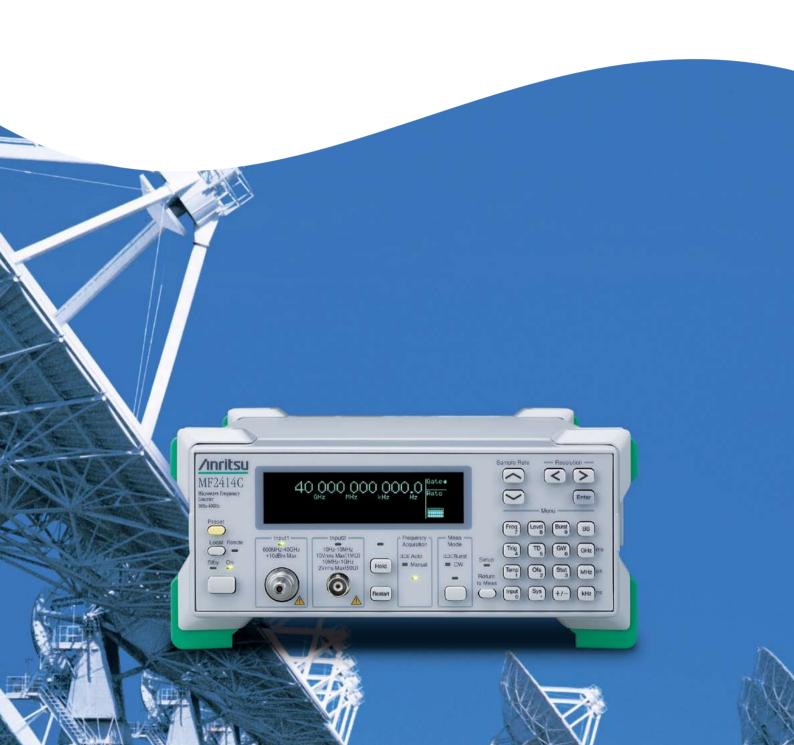

Newest Burst Wave Measurements

The MF2400C series lineup is composed of three frequency counters: the MF2412C (20 GHz), the MF2413C (27 GHz), and the MF2414C (40 GHz). This series is ideal for evaluating mobile radio communications devices and circuits, and can also measure the carrier frequency and pulse width of burst signals. In addition to displaying measurement results on a 12-digit VFD. frequency values can be read using the analog display function, which can be used for monitoring, and is especially useful for adjusting the frequency, etc., of various oscillators.

Furthermore, the template function is perfect for assessing whether or not results fall within upper and lower frequency limit specification. Because the evaluation result is output from the AUX connector on the back panel as a Go/No-go signal, an easy-to-use, automatic measurement system can be configured using the GPIB function.

MF2400C series

Microwave Frequency Counter 10 Hz to 20, 27, 40 GHz





Wide Band Measurement

The lineup of three counters with upper frequency limits of 20, 27, and 40 GHz, satisfies every usage requirement. In addition, a high-frequency fuse protects the input circuit from over-power signals, and a variety of adapters is available for coupling each connector


High-Accuracy Burst Measurement

The carrier frequency, burst width, and burst repetition rate of burst signals from 100 ns to 0.1 s input to Input 1 can be measured quickly and accurately.

Measurement	Positive selected	Negative selected
Burst width		
	Measurement at Burst ON	Measurement at Burst OFF
Burst repetition	Measurement of On-On period	Measurement of Off-Off period

Analog Display Function

Using this function, the entire VFD becomes an analog meter and values are indicated by the meter needle. In addition to quickly grasping changes in measured frequency, this permits faster frequency adjustment and Go/No-Go evaluation of oscillators, which previously required reading of many digits. This analog meter also solves problems of misreading frequency values.

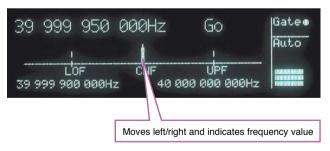

Template Function


When the upper and lower frequency limits have been preset, Go is displayed when the measured frequency is within the preset range; if it is out of range, No-Go is displayed. In addition, the Go/No-Go signal can be output from the AUX connector on the back panel as a TTL signal.

This is very useful for configuring an automatic Pass/Fail evaluation system (using analog display).

High-Speed Transient Measurement

Frequency counters have an interval (sample rate) when when measurement is not performed, so sudden frequency changes during this period cannot be measured.


However, the MF2400C series overcomes this problem by capturing frequency changes at speeds of up to 10 µs and saving a maximum of 2000 sampling points. When it is combined with a host computer, frequency changes can be displayed graphically. This is very effective for measuring VCO start-up characteristics and PLL lock times.

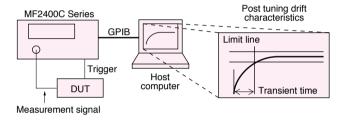

Gating Function

At burst signal measurement, the carrier frequency may be different at the burst start, middle, and end.

In the MF2400C series, the carrier signal frequency at any position of the signal (delay time from trigger signal leading edge) and at any specified time (gate time) can be measured using a combination of the gating and trigger delay functions.

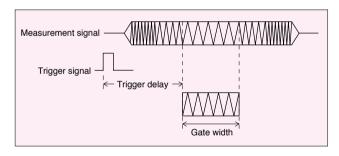

High-stability Reference Crystal Oscillator


A high-stability reference crystal oscillator is installed as standard in this counter instead of being available as an option in the previous MF2400B series.

It supports an order-of-magnitude better measurement stability than previous instruments without additional investment.

Added Save and Recall Functions

Up to 10 setups can be saved in the internal memory and freely recalled. Saving complex setups in advance, such as burst triggers and gate settings, supports immediate recall for measurement, reducing both measurement setup time and malfunctions due to setup mistakes.

Panel Layout

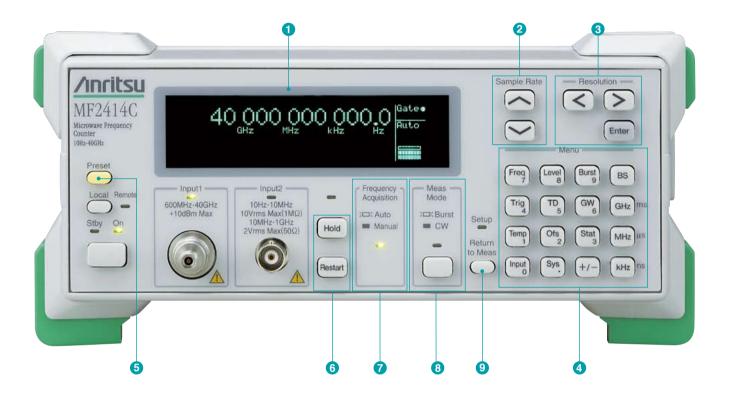

- 1 VDF display (256 x 64 dot): Measurement results and parameter settings displayed
- Sample Rate:
 - Sets measurement off time
- 3 Resolution:

At normal measurement, the ≤ and ≥ keys switch the frequency measurement resolution. However, when setting parameters, the ≤ and ≥ keys select the setting item, which is confirmed by pressing the Enter key.

- 4 Menu:
 - Sets measurement functions, such as frequency, level,

This menu changes automatically to the parameter setting condition, and changes numeric values and units.

- Preset:
 - Returns each parameter to default setting
- 6 Hold, Restart: The Hold key holds the measured valued. When Hold is ON, the key lamp is lit. The Restart key starts measurement over. When the Restart key is pressed when Hold is ON, the latest data is measured and held.

- Frequency Acquisition:
 - Used at frequency measurement of Input 1. At Auto, the full frequency band is swept and the frequency of signals exceeding the specified level is measured. At Manual, the preset frequency and frequency in the allowable input frequency range can be measured.
- Meas Mode:
 - At Burst, the burst signal width, period, and carrier frequency are measured (unrelated to Acquisition key setting, and change to manual measurement condition). Continuous wave measurement is performed in the CW mode.
- Return to Meas: Pressing this key after setting parameters, returns the counter to the normal measurement status.





- ① Ext Trig Input:

 Measures frequency using external timing signal
- AUX Output:
 Outputs control signal for measurement function and set parameters

Specifications

•	MF2400C Series M	icrowave Frequency Counter
Function	Frequency Range	Input 1 MF2412C: 600 MHz to 20 GHz MF2413C: 600 MHz to 27 GHz MF2414C: 600 MHz to 40 GHz Input 2 10 MHz to 1 GHz (50 Ω), 10 Hz to 10 MHz (1 MΩ)
	Input Level Range (Sine Wave Input)	Input 1 -33 to +10 dBm (<12.4 GHz), -28 to +10 dBm (<20 GHz), -25 to +10 dBm (<27 GHz), [-44.6 + 0.741 x frequency (GHz)] to +10 dBm (≤40 GHz) Input 2 25 mVrms to 2 Vrms (50 Ω), 25 mVrms to 10 Vrms (1 MΩ)
	Impedance, Coupling	Input 1: 50 Ω , AC coupled Input 2: 50 Ω or \geq 1 M Ω (\leq 35 pF), AC coupled
	Connector	Input 1 MF2412C: N-type, MF2413C: SMA-type, MF2414C: K-type Input 2: BNC-type
	Trigger Mode	Int: Triggered by measurement signal Ext: Triggered by external signal *Trigger level: 1.5 V ± (2 to 10 Vp-p), Trigger pulse width: ≥1 μs, Impedance: ≥100 Ω, Coupling: DC LINE: Triggered by AC line signal
Gating	Trigger Delay	20 ns to 0.1 s*1, Off (≤320 ns in 20 ns steps, and <1 μs in 40 ns steps variable; ≥1 μs in continuously variable as effective two digits)
Q	Gate Width	100 ns to 0.1 s (<1 µs in 20 ns steps variable; ≥1 µs in continuously variable as effective two digits)
	Frequency Range	MF2412C: 600 MHz to 20 GHz MF2413C: 600 MHz to 27 GHz MF2414C: 600 MHz to 40 GHz
	Pulse Width	100 ns to 0.1 s (NARROW), 1 μs to 0.1 s (WIDE)
ement	Pulse Repetition Frequency	10 Hz to 4 MHz (pulse off time: ≥240 ns)
Modulation Wave Measurement	Carrier Frequency Measurement*2	Max resolution: 1 kHz (pulse width: 100 ns to 1 μs), 100 Hz (pulse width: 1 to 10 μs), 10 Hz (pulse width: 10 to 100 μs), 1 Hz (pulse width: 100 μs to 1 ms), 0.1 Hz (pulse width: 1 to 100 ms) Measurement time: (T or TS whichever is greater) x {1/(fR x TGW)}² *³ Resolution
Pulse	Pulse Width Measurement	Resolution: 1 ns Accuracy: ±20 ns ± time base accuracy x measurement pulse width ± trigger accuracy Unit: μs (fixed)
	Pulse Period Measurement	Resolution: 1 ns Accuracy: ±20 ns ± time base accuracy x measurement period ± trigger accuracy Unit: μs (fixed)
Carrier Wave Frequency Measurement	Resolution, Gate Time	Input 1 NORMAL: 1 MHz/1 μs to 0.1 Hz/10 s FAST: 1 MHz/0.18 μs to 0.1 Hz/1.8 s (typ.) Input 2 10 MHz to 1 GHz (50 Ω): 1 MHz/1 μs to 0.1 Hz/10 s 10 Hz to 10 MHz (1 MΩ): Shown below Measurement period (times) 102 103 104 105 106 107 20 100 ms 10 mHz 100 mHz 100 mHz 100 mHz 100 Hz
Carrier Wave Fr	Measurement Accuracy	Input 1 NORMAL: ±1 count ± time base accuracy x measurement frequency ± residual error* ⁴ FAST: ±1 count ± time base accuracy x measurement frequency ± trigger accuracy ± residual error* ⁵ Input 2 10 MHz to 1 GHz: ±1 count ± time base accuracy x measurement frequency 10 Hz to 10 MHz: ±1 count ± time base accuracy x measurement frequency ± trigger accuracy

Auto/Manual Measurement	Auto FM tolerance: 35 MHzp-p, Acquisition time: ≤50 ms Manual (CW measurement) Input frequency range: ±30 MHz (600 MHz to 1 GHz), ±40 MHz (≥1 GHz) Acquisition time: ≤15 ms Manual (Burst measurement) Input frequency range: ±30 MHz (600 MHz to 1 GHz, pulse width mode: WIDE) ±20 MHz (≥1 GHz, pulse width mode: NARROW) ±40 MHz (≥1 GHz, pulse width mode: WIDE) Acquisition time: ≤15 ms
Functions	Template: Inputs at upper/lower limit of frequency, judged Go/No-Go Frequency offset: +offset, -offset, ppm Statistical processing: mean, maximum, minimum, p-p Save/recall: 10 panel settings (max)
AUX Output	Output for Go/No-Go, count end, input level detection, internal gating, restart, and acquisition signal
Sample Rate	1 ms to 10 s (1-2-5 steps), hold
High-Speed Sample Period/Frequency Resolution	Input 1: 10 μs/10 kHz, 100 μs/1 kHz, 1 ms/100 Hz Input 2: 10 μs/100 kHz, 100 μs/10 kHz, 1 ms/1 kHz *Measurement frequency: 100 MHz
Memory Backup	Saved in backup memory at power off
Display	Display digits: 12 digits and 1 digit (– mark) VFD: 256 x 64 dots
Reference Crystal Oscillator	Frequency: 10 MHz Warm-up: ≤±5 x 10 ⁻⁸ /day (after 10 minute warm-up) Aging rate: ≤±5 x 10 ⁻⁹ /day (after 24 h warm-up) Temperature characteristics: ±5 x 10 ⁻⁸ (0° to +50°C)
External Reference Input	1, 2, 5, 10 MHz, Input voltage: 1 to 5 Vp-p (AC coupled), Input impedance: ≥1 kΩ
External Reference Output	1, 2, 5, 10 MHz*6, Output voltage: ≥2 Vp-p (open end, AC coupled), Output impedance: ≤400 Ω
External Control	GPIB (conforms to IEEE488.2 standards): SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT1, C0, E2
Power	100 to 120 V/200 to 240 V (auto-switching), 50 to 60 Hz, ≤90 VA≤, ≤80 VA
Operating Temperature	0° to +50°C
Dimensions and Mass	213 (W) x 88 (H) x 350 (D) mm, ≤5 kg
EMC	EN61326 EN61000-3-2
LVD	EN61010-1

- *1 Delay time until counter started by trigger detection
- *2 MANUAL measurement mode
 *3 f_R: frequency resolution, TGW: gate width, Ts: processing time (50 μs), T: period (2/f_R)
 *4 Measurement frequency (GHz)/10 count (rms)
 *5 Measurement frequency (GHz)/2 count (rms)

- *6 10 MHz when using internal reference signal; outputs signal based on this signal (1/2/5/10 MHz) when using external reference signal

• Options: Crystal Oscillator

Option Number	MF2412C-003	MF2413C-003	MF2414C-003
Frequency	10 MHz		
Aging Rate	±5 x 10 ⁻¹⁰ /day, ±2 x 10 ⁻⁸ /year *After power-on, with reference to frequency after 72 h		
Temperature Characteristics	±5 x 10 ⁻⁹ -10° to +60°C (with reference to 25°C)		

Ordering Information

Please specify the model/order number, name and quantity when ordering.

The following name of articles is an order name. The actual name may differ name from the product.

Model/Order No.	Name	
MF2412C MF2413C MF2414C	Main frame – Microwave Frequency Counter (10 Hz to 20 GHz, N-J connector) Microwave Frequency Counter (10 Hz to 27 GHz, SMA-J connector) Microwave Frequency Counter	
WII 24140	(10 Hz to 40 GHz, K-J connector)	
F0012 W2897AE	- Standard accessories - Power Cord, 2.5 m: Fuse, 3.15 A: MF2412C/2413C/2414C Operation Manual:	1 pc 2 pcs 1 copy
MF2412C-003 MF2413C-003 MF2414C-003	 Options – Crystal Oscillator (5 x 10⁻¹⁰/day) Crystal Oscillator (5 x 10⁻¹⁰/day) Crystal Oscillator (5 x 10⁻¹⁰/day) 	

*1: The K224B Coaxial Adapter prevents damage to the input connector.

adapter matching the coupled connector type is required.

*2: The MF2400C series has the MP612A Fuse Holder (with MP613A Fuse Element) to prevent over-power input. In addition, the MP612A Fuse Holder has an N-type connector, so an

Model/Order No.	Name	
	- Optional accessories -	
K224B*1	Coaxial Adapter	
	(K-P • K-J, SMA compatible, DC to 40 GHz, SWR: 1.2)	
34RKNF50	Coaxial Adapter	
	(ruggedized K-P • N-J, DC to 20 GHz, SWR: 1.25)	
J0060	Coaxial Adapter (N-J • SMA-P)	
J0526	Coaxial Adapter (N-J • SMA-J)	
J0527	Coaxial Cord (K-P • K-P), 2 ft	
J0127A	Coaxial Cord (BNC-P • RG-58A/U • BNC-P), 1 m	
J0853	Coaxial Cord (N-P • SF104P • N-P), 2 m	
J0854	Coaxial Cord (APC3.5-P • SF104P • APC3.5-P), 2 m	
MP612A*2	Fuse Holder (N-P • N-J, DC to 1 GHz)	
MP613A*2	Fuse Element (DC to 1 GHz, Power rating: +17 dBm,	
	Failsafe rating: ≥+35 dBm)	
J0007	GPIB Cable, 1 m	
J0008	GPIB Cable, 2 m	
B0409	Carrying Case (With B0329L Protection Cover)	
B0598A	Carrying Bag (soft type, with B0329L Protection Cover)	
B0390G	Rack Mount Kit (19" type, one unit)	
B0411A	Rack Mount Kit (19" type, two units, side-by-side)	
B0329L	Protection Cover	



Anritsu Corporation

5-1-1 Onna, Atsugi-shi, Kanagawa, 243-8555 Japan Phone: +81-46-223-1111 Fax: +81-46-296-1264

• U.S.A.

Anritsu Company

1155 East Collins Blvd., Suite 100, Richardson, TX 75081, U.S.A. Toll Free: 1-800-267-4878 Phone: +1-972-644-1777 Fax: +1-972-671-1877

• Canada

Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120, Kanata, Ontario K2V 1C3, Canada Phone: +1-613-591-2003 Fax: +1-613-591-1006

Anritsu Eletrônica Ltda.

Praca Amadeu Amaral, 27 - 1 Andar 01327-010-Paraiso-São Paulo-Brazil Phone: +55-11-3283-2511 Fax: +55-11-3288-6940

• U.K.

Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire, LU1 3LU, U.K. Phone: +44-1582-433200 Fax: +44-1582-731303

• France

Anritsu S.A.

16/18 avenue du Québec-SILIC 720 91961 COURTABOEUF CEDEX, France Phone: +33-1-60-92-15-50 Fax: +33-1-64-46-10-65

Germany Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1 81829 München, Germany Phone: +49-89-442308-0 Fax: +49-89-442308-55

Italy

Anritsu S.p.A.
Via Elio Vittorini 129, 00144 Roma, Italy Phone: +39-6-509-9711 Fax: +39-6-502-2425

Sweden

Anritsu AB

Borgafjordsgatan 13, 164 40 KISTA, Sweden Phone: +46-8-534-707-00 Fax: +46-8-534-707-30

Finland

Anritsu AB

Teknobulevardi 3-5, FI-01530 VANTAA, Finland Phone: +358-20-741-8100 Fax: +358-20-741-8111

Denmark

Anritsu A/S

Kirkebjerg Allé 90, DK-2605 Brøndby, Denmark Phone: +45-72112200 Fax: +45-72112210

Spain

Anritsu EMEA Ltd.

Oficina de Representación en España

Edificio Veganova Avda de la Vega, n° 1 (edf 8, pl 1, of 8) 28108 ALCOBENDAS - Madrid, Spain Phone: +34-914905761

United Arab Emirates Anritsu EMEA Ltd.

Dubai Liaison Office

Fax: +34-914905762

P O Box 500413 - Dubai Internet City All Thuraya Building, Tower 1, Suit 701, 7th Floor Dubai, United Arab Emirates Phone: +971-4-3670352 Fax: +971-4-3688460

Singapore Anritsu Pte. Ltd.

60 Alexandra Terrace, #02-08, The Comtech (Lobby A) Singapore 118502 Phone: +65-6282-2400 Fax: +65-6282-2533

India Anritsu Pte. Ltd. **India Branch Office**

Unit No. S-3, Second Floor, Esteem Red Cross Bhavan, No. 26, Race Course Road, Bangalore 560 001, India Phone: +91-80-32944707 Fax: +91-80-22356648

Specifications are subject to change without notice.

• P.R. China (Hong Kong) Anritsu Company Ltd.

Units 4 & 5, 28th Floor, Greenfield Tower, Concordia Plaza, No. 1 Science Museum Road, Tsim Sha Tsui East, Kowloon, Hong Kong

Phone: +852-2301-4980 Fax: +852-2301-3545

P.R. China (Beijing) Anritsu Company Ltd.

Beijing Representative Office

Room 1515, Beijing Fortune Building, No. 5, Dong-San-Huan Bei Road, Chao-Yang District, Beijing 10004, P.R. China Phone: +86-10-6590-9230 Fax: +86-10-6590-9235

Korea

Anritsu Corporation, Ltd.

8F Hyunjuk Building, 832-41, Yeoksam Dong, Kangnam-ku, Seoul, 135-080, Korea Phone: +82-2-553-6603 Fax: +82-2-553-6604

Australia

Anritsu Pty. Ltd.

Unit 21/270 Ferntree Gully Road, Notting Hill, Victoria 3168, Australia Phone: +61-3-9558-8177 Fax: +61-3-9558-8255

Taiwan

Anritsu Company Inc.

7F, No. 316, Sec. 1, Neihu Rd., Taipei 114, Taiwan Phone: +886-2-8751-1816 Fax: +886-2-8751-1817

070801

